

# SPARE PARTS LIST

MODEL NO. FS4000

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	158875-2	LOCATOR S COMPLETE	1	
002	424163-2	DUST SEAL SLEEVE	1	
003	424235-3	SEAL RING 30	1	
004	455591-0	LOCK RING	1	
005	233974-2	RING SPRING 33	1	
006	232245-4	LEAF SPRING	1	
007	266361-0	TAPPING SCREW 4X30	3	
008	158883-3	GEAR HOUSING HP COMPLETE	1	
009	232050-9	LEAF SPRING	1	
010	216001-0	STEEL BALL 3.5	1	
011	324983-3	SPINDLE 125N	1	
016	233126-5	COMPRESSION SPRING 6	1	
017	268229-6	COLLARED PIN 8	1	
018	227769-3	HELICAL GEAR 41N	1	
019	216415-3	THRUST NEEDLE GAUGE 821	1	
020	216212-7	WASHER 821	1	
021	424162-4	SEAL RING	1	
022	158874-4	GEAR HOUSING COVER COMPLETE	1	
023	451099-2	RING 7	1	
024	210007-0	BALL BEARING 608VV	1	
025	240083-0	FAN 52	1	
026	515759-1	ARMATURE ASSEMBLY 240V INC. 23-25,27,28	1	
027	681636-0	INSULATION WASHER	1	
028	210062-2	BALL BEARING 607ZZ	1	
029	421868-5	LABYRINTH RUBBER RING 19	1	
030	266467-4	TAPPING SCREW 4X50	2	
031	450880-8	BAFFLE PLATE	1	
032	633693-4	FIELD 220-240V	1	
033	450885-8	MOTOR HOUSING L2	1	
034	162272-6	HOOK	1	
035	866602-0	FS4000 NAME PLATE	1	
036	890670-1	4000RPM INDICATION LABEL	1	
037	689111-0	SPACER	2	
038	191962-4	CARBON BRUSH CB-419	1	
039	643948-9	BRUSH HOLDER	1	
040	643951-0	BRUSH HOLDER	1	
041	687124-5	STRAIN RELIEF	1	
042	650614-1	SWITCH	1	
043	158878-6	HANDLE COVER L COMPLETE	1	
044	266374-1	TAPPING SCREW 4X25	1	
045	266374-1	TAPPING SCREW 4X25	2	
047	646122-8	CHOKE COIL	1	
048	645253-0	NOISE SUPPRESSOR	1	
049	265995-6	TAPPING SCREW 4X18	2	
050	682559-5	CORD GUARD 8	1	
051	695034-2	POWER SUPPLY CORD 1.0-2-4.0	1	
052	892811-5	CLEAR LABEL	1	
053	423413-2	RUBBER PLATE	1	
A01	784261-7	+BIT 2-25	2	
A02	784811-8	MAGNETIC CONNECT BIT 6.35-60	1	
A03	824890-5	PLASTIC CARRYING CASE	1	

# SERVICE DRAWING

MODEL NO. FS4000

