



# Illustrated Parts List

## Model Series

# 10T500

TYPE NUMBERS  
0100 through 3840.

### TABLE OF CONTENTS

 
Air Cleaner .....	6
Blower Housing/Shrouds .....	7
Brake .....	5
Camshaft .....	3
Carburetor .....	4
Controls .....	5
Crankcase Cover/Sump .....	3
Crankshaft .....	3
Cylinder .....	2
Cylinder Head .....	2
Exhaust System .....	6
Flywheel .....	7
Fuel Supply .....	4
Gasket Set - Engine .....	2
Gasket Set - Valve .....	2
Governor Spring .....	5
Ignition .....	5
Lubrication .....	2
Operator's Manual .....	2
Piston/Rings/Connecting Rod .....	3
Rewind Starter .....	7
Warning Label .....	2




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

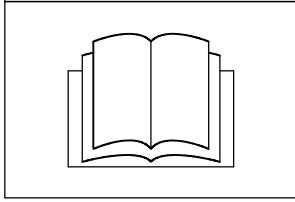

1330 REPAIR MANUAL

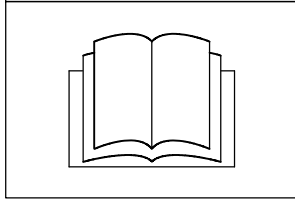 


1319 WARNING LABEL








<b>WARNING</b>	
	Read and follow Operating instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, <b>DO NOT</b> run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

**REQUIRED** when replacing parts with warning labels affixed.

 
358 ENGINE GASKET SET

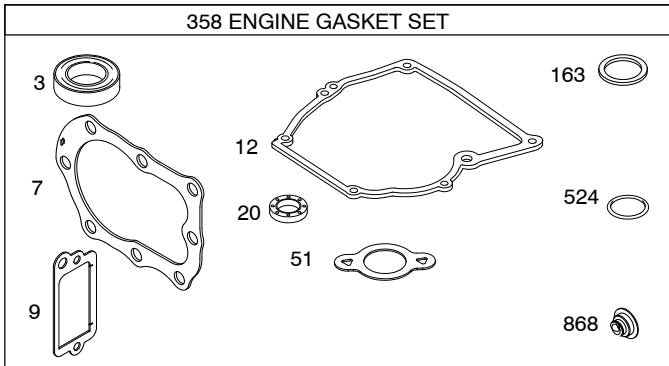



1095 VALVE GASKET SET





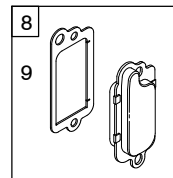 
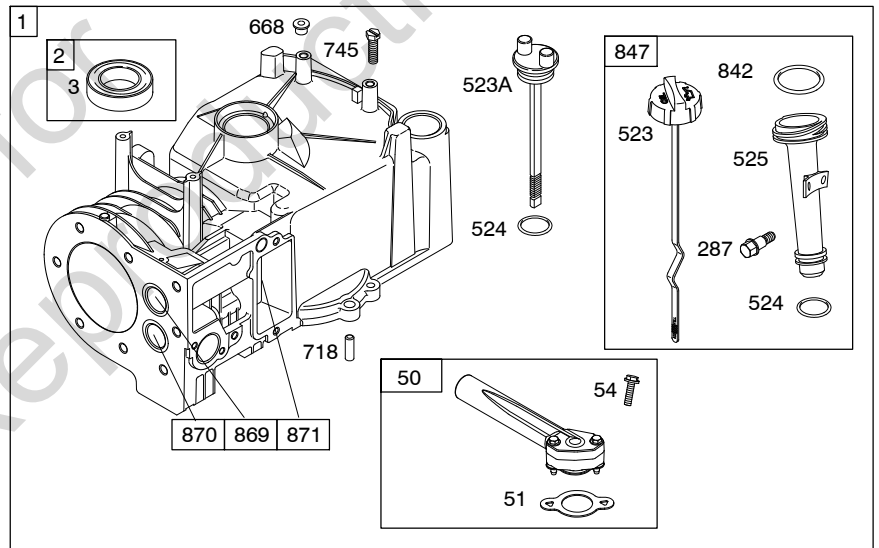 
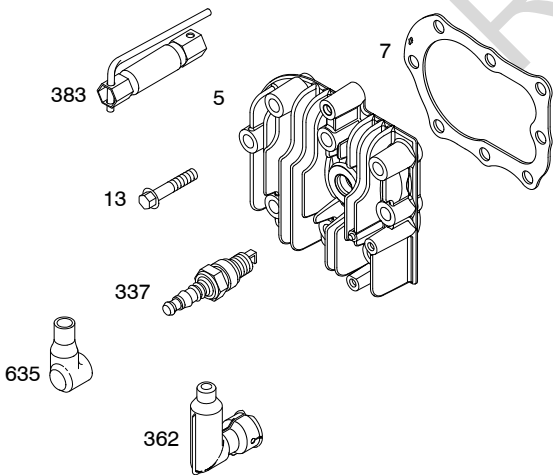 
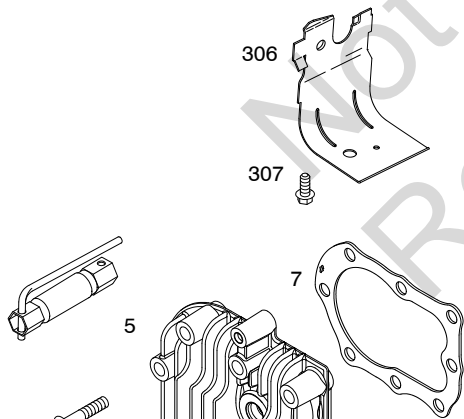 
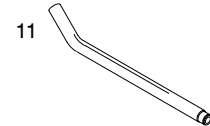 
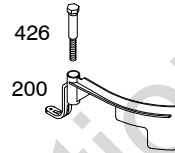 
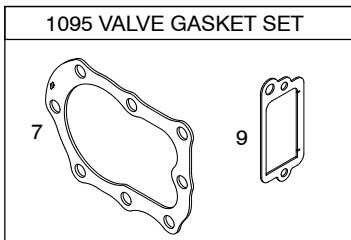 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3718-2 Assemblies include all parts shown in frames. 01/12/2010










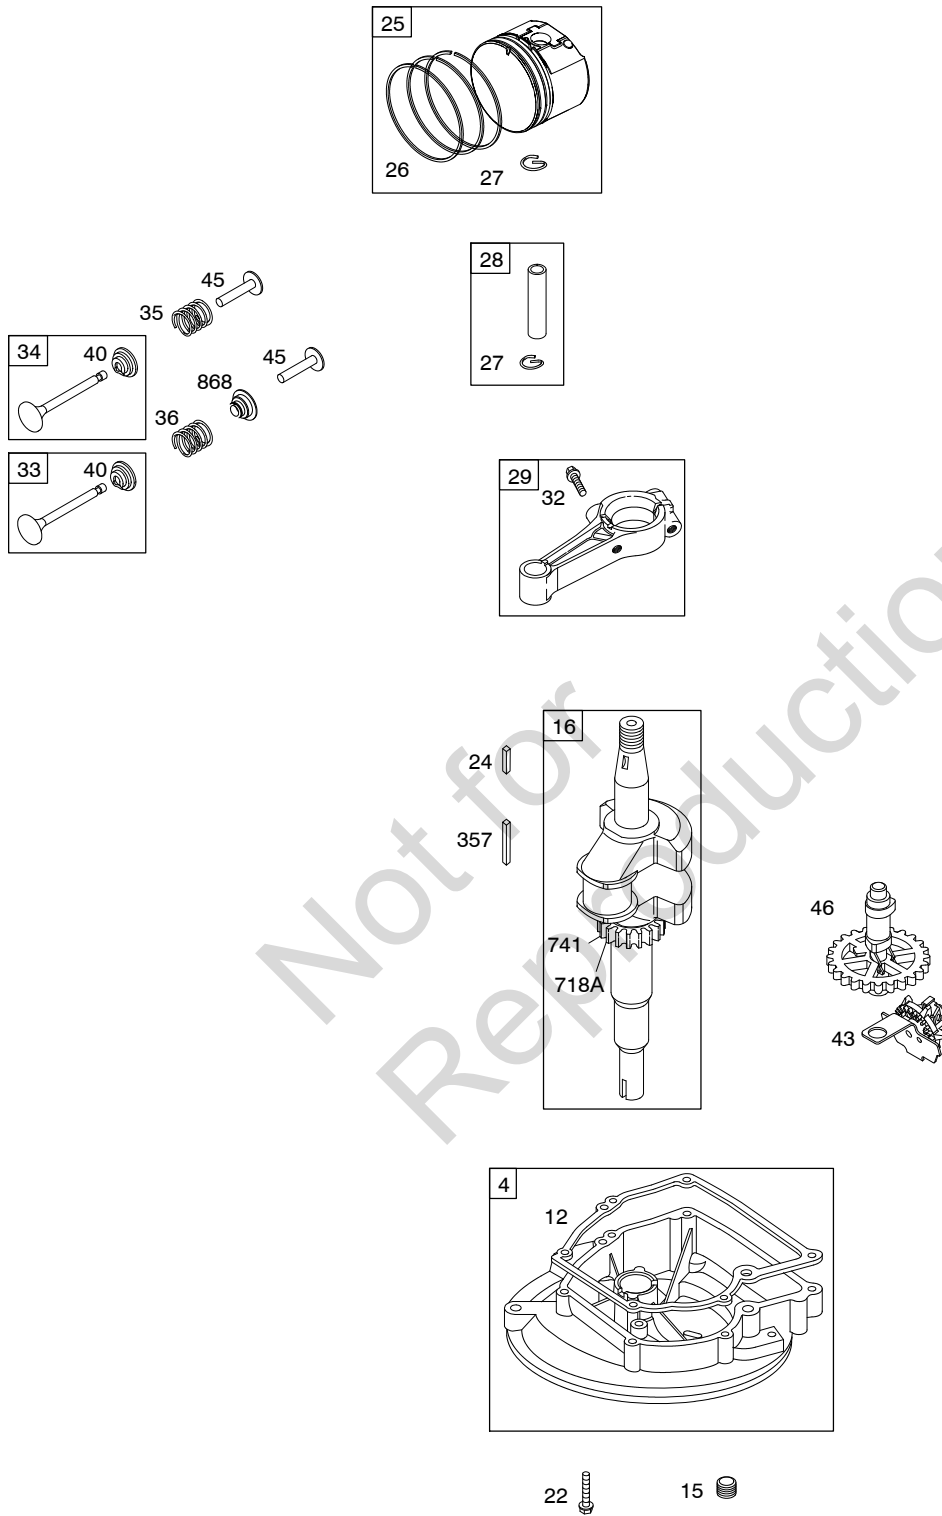 


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3718-3 Assemblies include all parts shown in frames. 01/12/2010









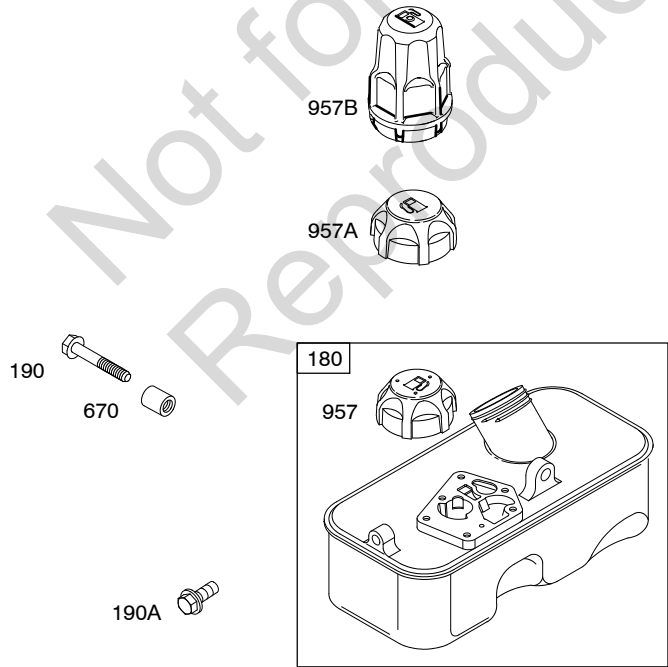 
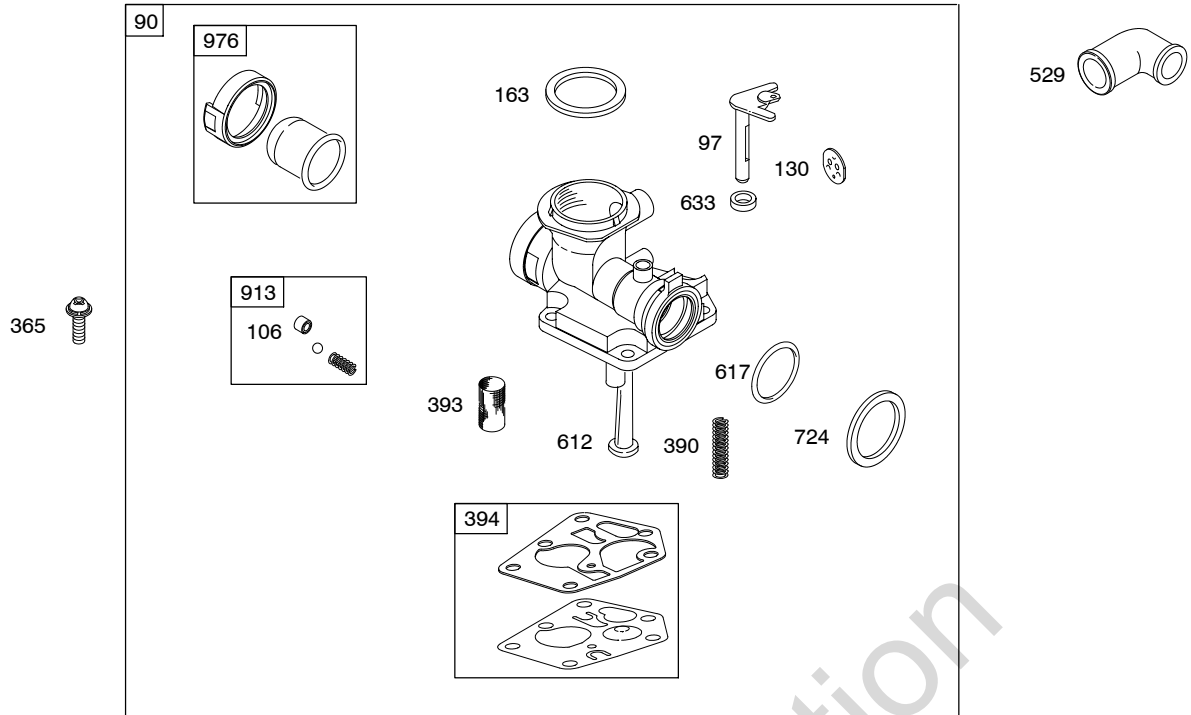 


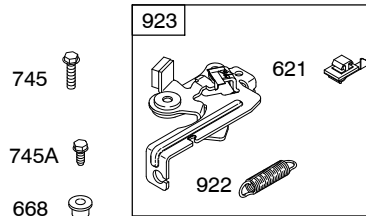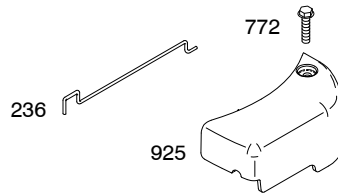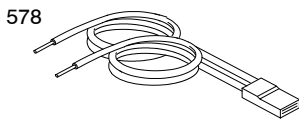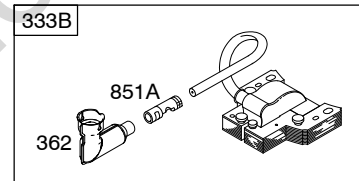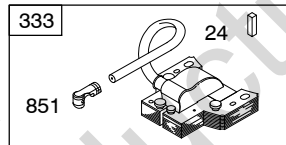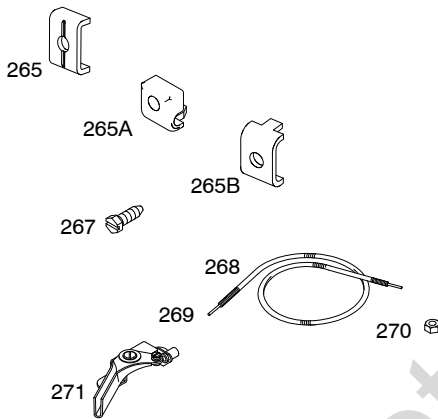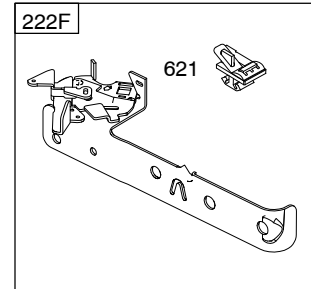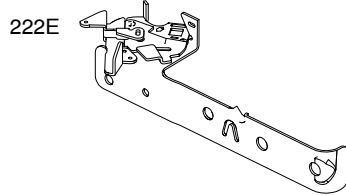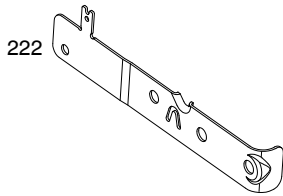           

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3718-5 Assemblies include all parts shown in frames. 01/12/2010

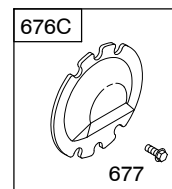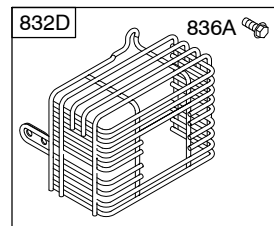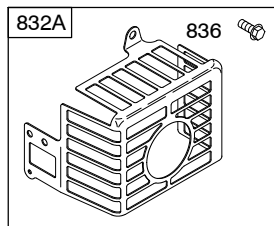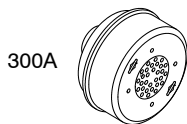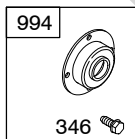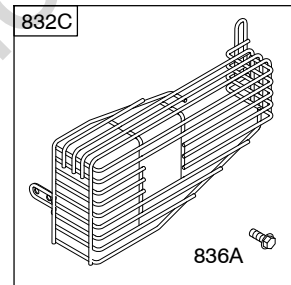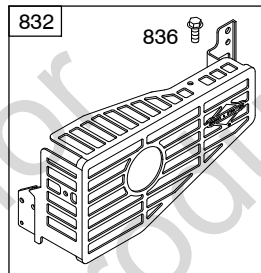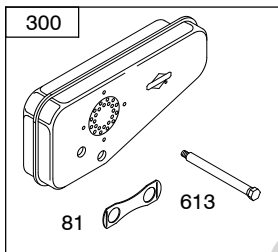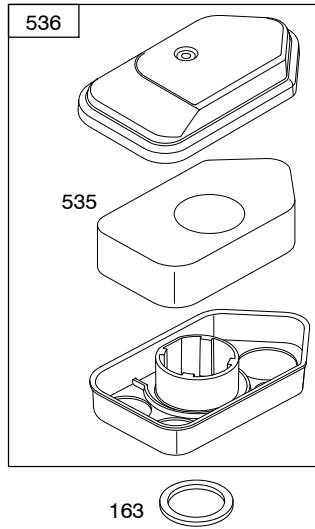          

1036 EMISSIONS LABEL

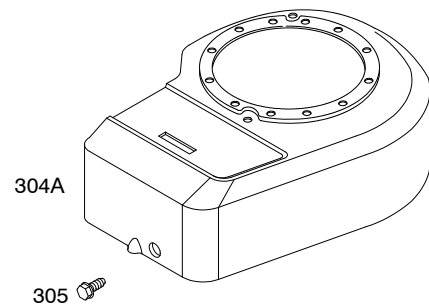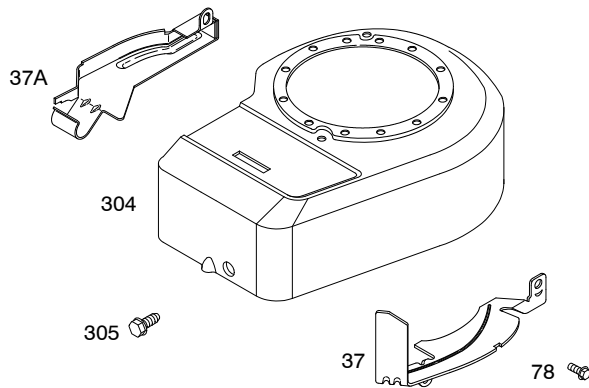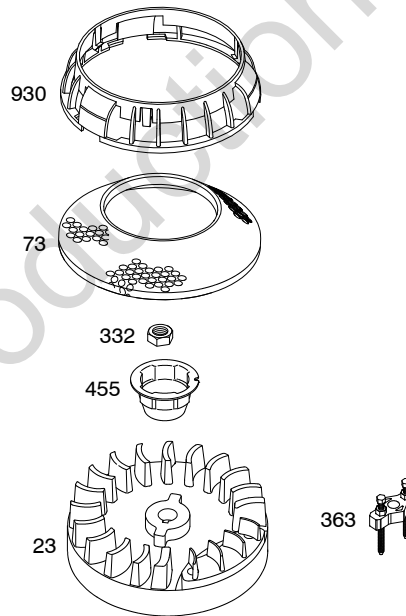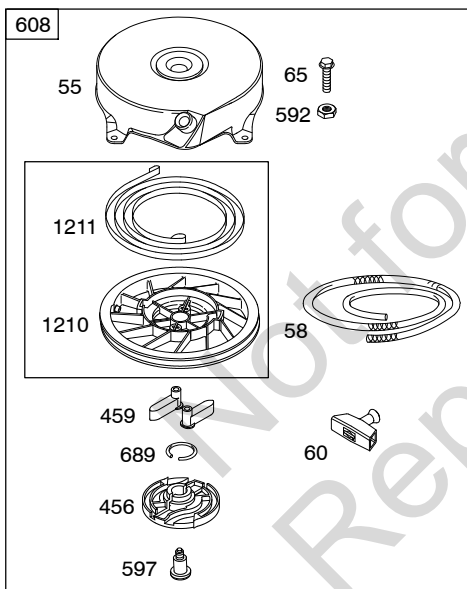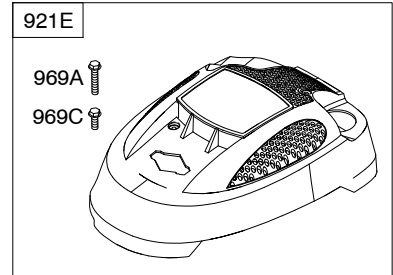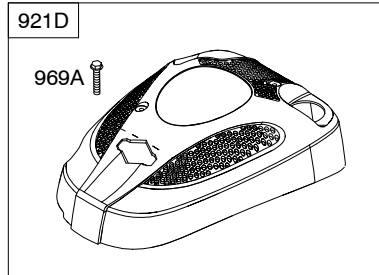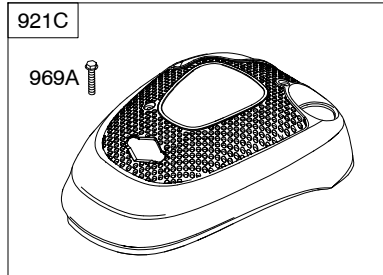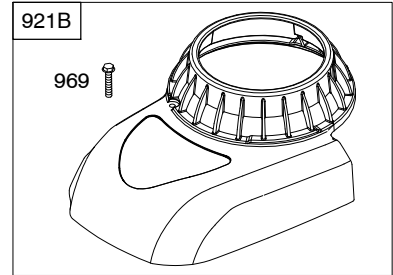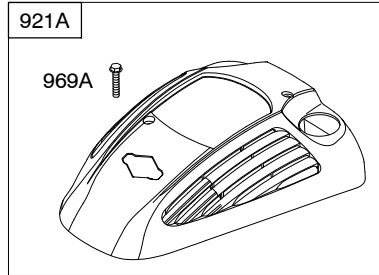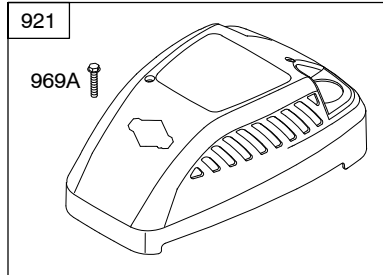          

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3718-7 Assemblies include all parts shown in frames. 01/12/2010

# 10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	16	796218	Crankshaft	20	391483S	Seal-Oil (PTO Side)
2	399269	Kit-Bushing/Seal (Magneto Side)			Used on Type No(s). 0121, 0123, 0130, 0146, 0178, 0197, 0204, 0206, 0212, 0214, 0216, 0501, 0550.	22	692551	Screw (Crankcase Cover/Sump)
3	299819S	Seal-Oil (Magneto Side)			----- Note -----	23	795549	Flywheel ----- Note ----- <b>795695</b> Flywheel
4	698691	Sump-Engine			<b>796217</b> Crankshaft			Used on Type No(s). 0113, 0116, 0120, 0121, 0123, 0130, 0133, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0178, 0186, 0195, 0197, 0204, 0206, 0212, 0213, 0214, 0215, 0216, 0217, 0220, 0254, 0255, 0550.
5	790169	Head-Cylinder			Used on Type No(s). 0115, 0116, 0118, 0127, 0132, 0133, 0137, 0140, 0145, 0147, 0155, 0170, 0172, 0181, 0190, 0191, 0193, 0198, 0199, 0200, 0202, 0203, 0209, 0213, 0221, 0250, 0251, 0252, 0256, 0258, 0260, 0457, 0495, 0500, 0264, 0265, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1264, 1303, 1316, 1336, 1414, 2008, 2010, 2011, 2027, 2028, 2034, 2035, 3764, 3838, 3840.	24	222698S	Key-Flywheel
7	698717	Gasket-Cylinder Head				25	790908	Piston Assembly (Standard) ----- Note ----- <b>792532</b> Piston Assembly (.020" Oversize)
8	791781	Breather Assembly						
9	695890	Gasket-Breather				26	795132	Ring Set (Standard) ----- Note ----- <b>795134</b> Ring Set (.020" Oversize)
10	691666	Screw (Breather Assembly)						
11	691245	Tube-Breather				27	691588	Lock-Piston Pin
12	692218	Gasket-Crankcase (.015" Thick) (Standard) ----- Note ----- <b>270895</b> Gasket- Crankcase (.005" Thick) <b>270896</b> Gasket- Crankcase (.009" Thick)				28	699659	Pin-Piston (Standard)
13	691640	Screw (Cylinder Head)				29	699654	Rod-Connecting
15	691680	Plug-Oil Drain				32	691664	Screw (Connecting Rod)

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**3718-8 Assemblies include all parts shown in frames. 01/12/2010**



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
33	296676	Valve-Exhaust	58	697316	Rope-Starter (88 5/8" Long)	60	691915	Grip-Starter Rope
34	296677	Valve-Intake			Used on Type No(s).	65	690837	Screw (Rewind Starter)
35	690520	Spring-Valve (Intake)			0100, 0111, 0112,	73	699850	Screen-Rotating
36	690520	Spring-Valve (Exhaust)			0115, 0117, 0118,	78	692198	Screw (Flywheel Guard)
37	691209	Guard-Flywheel (Muffler Side)			0120, 0121, 0127,	81	691179	Lock-Muffler Screw
37A	690482	Guard-Flywheel (Carburetor Side)			0132, 0136, 0137,	90	795469	Carburetor
40	692194	Retainer-Valve			0139, 0140, 0141,	97	691931	Shaft-Throttle
43	698690	Slinger-Governor/Oil			0142, 0144, 0145,	106	691901	Seat-Inlet
45	691762	Tappet-Valve			0146, 0147, 0153,	130	691190	Valve-Throttle
46	691998	Camshaft			0155, 0157, 0158,	163	271139S	Gasket-Air Cleaner
50	699644	Manifold-Intake			0168, 0169, 0170,	180	494406	Tank-Fuel
51	699649	Gasket-Intake			0171, 0172, 0173,	188	692198	Screw (Control Bracket)
54	691111	Screw (Intake Manifold)			0176, 0179, 0181,	190	691640	Screw (Fuel Tank) (1 3/4" Long)
55	692144	Housing-Rewind Starter			0183, 0184, 0186,	190A	691108	Screw (Fuel Tank) (9/16" Long)
					0187, 0188, 0189,	200	691912	Blade-Governor
					0190, 0191, 0193,	201	690347	Link-Air Vane
					0195, 0198, 0199,			
					0200, 0202, 0203,			
					0204, 0205, 0207,			
					0208, 0209, 0210,			
					0215, 0218, 0221,			
					0246, 0250, 0251,			
					0252, 0253, 0256,			
					0257, 0258, 0259,			
					0260, 0262, 0263,			
					0264, 0265, 0457,			
					0495, 0500, 0501,			
					0609, 0764, 0833,			
					0838, 0840, 0869,			
					0931, 0998, 1000,			
					1022, 1023, 1041,			
					1053, 1056, 1058,			
					1096, 1111, 1264,			
					1303, 1316, 1336,			
					1414, 2008, 2010,			
					2011, 2027, 2028,			
					2034, 2035, 2110,			
					3764, 3838, 3840.			
					----- Note -----			
					691921 Rope-Starter (70" Long)			
					Used on Type No(s).			
					0113, 0114, 0116,			
					0123, 0130, 0133,			
					0143, 0161, 0162,			
					0166, 0174, 0175,			
					0177, 0178, 0197,			
					0206, 0212, 0213,			
					0214, 0216, 0217,			
					0220, 0254, 0255,			
					0550.			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

# 10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	691297	Spring-Governor Used on Type No(s). 0100, 0115, 0116, 0161, 0162, 0186, 0215, 0250, 0255, 0260, 0263, 0457E1, 0495E1, 0500E1, 0501, 1041, 1264, 1303, 1316, 1414, 2028. ----- Note ----- <b>691297</b> Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0457B1, 0495B1, 0500B1. <b>691297</b> Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0457B1, 0495B1, 0500B1, 1022, 1023, 1053, 1058, 3838. <b>691862</b> Spring-Governor Used on Type No(s). 0123, 0130, 0178, 0197, 0206, 0212, 0214, 0216, 0220, 0550. <b>690254</b> Spring-Governor Used on Type No(s). 0111, 0112, 0113, 0118, 0120, 0132, 0137, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0179, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0200, 0202, 0203, 0217, 0218, 0221, 0246, 0251, 0252, 0253, 0254, 0258, 0259, 0264, 0609, 2008, 2010, 2011, 2027, 2035, 2110.			<b>690254</b> Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0998, 1111. <b>690254</b> Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0998, 1111. <b>690251</b> Spring-Governor Used on Type No(s). 0114, 0117, 0127, 0136, 0139, 0140, 0141, 0142, 0144, 0145, 0177, 0183, 0184, 0199, 0205, 0207, 0208, 0209, 0210, 0256, 0257, 0262, 0265, 0764, 0838, 0840, 1096, 1336, 2034. <b>690251</b> Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0869, 0931, 1000, 3764, 3838, 3840. <b>690251</b> Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0833, 0869, 0931, 1000, 1056, 3764, 3840. <b>690250</b> Spring-Governor Used on Type No(s). 0121E1, 0133, 0204, 0213. <b>690250</b> Spring-Governor (Used Before Code Date 07092400). Used on Type No(s). 0121B1.			<b>690250</b> Spring-Governor (Used After Code Date 07111500). Used on Type No(s). 0121B1. <b>795160</b> Spring-Governor (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840. <b>211 691859</b> Spring-Governed Idle

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
3718-10 Assemblies include all parts shown in frames. 01/12/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	698725	Bracket-Control (Used Before Code Date 07111600 and After Code Date 07092300). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.		691446	Bracket-Control (Used After Code Date 07111500). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0833, 0869, 0931, 0998, 1000, 1022, 1023, 1053, 1056, 1058, 1111, 3764, 3838, 3840.	267	691044	Screw (Casing Clamp)
222E	691446	Bracket-Control Used on Type No(s). 0100, 0111, 0112, 0118, 0121E1, 0132, 0136, 0137, 0141, 0144, 0145, 0147, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0198, 0199, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0221, 0246, 0250, 0251, 0252, 0253, 0256, 0258, 0259, 0263, 0264, 0265, 0457E1, 0495E1, 0500E1, 0501, 0609, 0764, 0838, 0840, 1041, 1096, 1264, 1303, 1316, 1336, 1414, 2008, 2010, 2011, 2027, 2035, 2110.  ----- Note ----- 691446 Bracket-Control (Used Before Code Date 07092400). Used on Type No(s). 0121B1, 0457B1, 0495B1, 0500B1, 0869, 0931, 0998, 1000, 1111, 3764, 3838, 3840.	222F	691445	Bracket-Control Used on Type No(s). 0113, 0114, 0115, 0116, 0117, 0120, 0123, 0127, 0130, 0133, 0139, 0140, 0142, 0143, 0146, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0183, 0184, 0186, 0195, 0197, 0200, 0206, 0210, 0212, 0213, 0214, 0215, 0216, 0217, 0218, 0220, 0254, 0255, 0257, 0260, 0262, 0264, 0550, 2028, 2034.	268	691025	Casing-Control Wire (Cut To Required Length)
			236	691867	Link-Lockout Used on Type No(s). 0139, 0140.	269	691026	Wire-Control (Cut To Required Length)
			265	692179	Clamp-Casing Used on Type No(s). 0116, 0142, 0144, 0145, 0166, 0183, 0184.	270	691027	Nut (Control Wire Casing)
			265A	690798	Clamp-Casing Used on Type No(s). 0100, 0117, 0120, 0132, 0139, 0140, 0162, 0179, 0195, 0198, 0199, 0200, 0205, 0207, 0208, 0209, 0213, 0215, 0218, 0220, 0256, 0264, 2011, 2028.	271	691028	Lever-Control
			265B	691024	Clamp-Casing Used on Type No(s). 0115, 0118, 0127, 0147, 0210, 0257, 0260, 0262, 2034.	287	691002	Screw (Dipstick Tube)
						300	692307	Muffler (Super Lo Tone) Used on Type No(s). 0100, 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120, 0121, 0127, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0212, 0213, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0609, 0833, 0838, 0931, 0998, 1000, 1111, 1336, 2011, 2027, 2028, 2034, 2035, 2110, 3838.

# 10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>300A</b>	<b>394569S</b>	Muffler (Round Lo Tone) Used on Type No(s). 0123, 0130, 0178, 0181, 0206, 0214, 0215, 0216, 0246, 0250, 0251, 0457, 0495, 0500, 0501, 0550, 0764, 0840, 0869, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1264, 1303, 1316, 1414, 2008, 2010, 3764, 3840.	<b>304A</b>	<b>694236</b>	Housing-Blower (Compliance Engines) Used on Type No(s). 0111, 0112, 0118, 0132, 0137, 0144, 0145, 0147, 0157, 0158, 0169, 0170, 0171, 0172, 0173, 0176, 0180, 0181, 0187, 0188, 0189, 0190, 0191, 0193, 0198, 0199, 0202, 0203, 0205, 0207, 0208, 0209, 0252, 0253, 0256, 0258, 0259, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1264, 1303, 1316, 1336, 1414, 2008, 2010, 2011, 2027, 2035, 2110, 3764, 3838, 3840.	<b>333</b>	<b>793281</b>	Armature-Magneto
						<b>333B</b>	<b>793352</b>	Armature-Magneto Used on Type No(s). 0111, 0112, 0113, 0114, 0116, 0120B2, 0123, 0132, 0133, 0137, 0139, 0140, 0142, 0143, 0146, 0162, 0166, 0168, 0179, 0180, 0181, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0215, 0216, 0217, 0218, 0220, 0221, 0253, 0254, 0255, 0256, 0258, 0259, 0264, 0265, 0609, 0833, 0840, 0869, 0998, 1000, 1041, 1111, 1264, 1414, 2008, 2010, 2011, 3840.
<b>304</b>	<b>694051</b>	Housing-Blower (Non Compliance Engines) Used on Type No(s). 0113, 0114, 0115, 0123, 0127, 0130, 0142, 0143, 0146, 0162, 0175, 0177, 0183, 0184, 0200, 0206, 0210, 0214, 0218, 0220, 0257, 0260, 0262, 0550, 2028, 2034.				<b>334</b>	<b>691061</b>	Screw (Magneto Armature) (1" Long)
		----- Note ----- <b>691484</b> Housing- Blower (Compliance Engines) Used on Type No(s). 0100, 0136, 0139, 0140, 0141, 0153, 0155, 0168, 0179, 0221, 0246, 0250, 0251, 1111.				<b>335</b>	<b>691107</b>	Screw (Magneto Armature With Air Vane) (1 15/16" Long)
						<b>337</b>	<b>802592S</b>	Plug-Spark ----- Note ----- <b>697451</b> Plug-Spark Used on Type No(s). 0100, 0115, 0117, 0118, 0120B1, 0127, 0136, 0141, 0144, 0145, 0147, 0153, 0155, 0157, 0158, 0161, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0183, 0184, 0210, 0246, 0250, 0251, 0252, 0257, 0260, 0262, 0263, 2028, 2034, 2110.
			<b>305</b>	<b>692198</b>	Screw (Blower Housing)			
			<b>306</b>	<b>690400</b>	Shield-Cylinder			
			<b>307</b>	<b>690345</b>	Screw (Cylinder Shield)			
			<b>332</b>	<b>690662</b>	Nut (Flywheel)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
3718-12 Assemblies include all parts shown in frames. 01/12/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
346	690661	Screw (Spark Arrester) Used on Type No(s). 0833.	523A	691913	Dipstick Used on Type No(s). 0100, 0113, 0114, 0116, 0121, 0133, 0153, 0155, 0157, 0161, 0162, 0166, 0174, 0176, 0178, 0179, 0189, 0190, 0197, 0198, 0199, 0203, 0204, 0205, 0207, 0208, 0209, 0212, 0213, 0215, 0216, 0217, 0221, 0246, 0250, 0251, 0254, 0255, 0457, 0501, 2027, 2034.	608	499706	Starter-Rewind (88 5/8" Rope) Used on Type No(s). 0100, 0111, 0112, 0115, 0117, 0118, 0120, 0121, 0127, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0144, 0145, 0146, 0147, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0176, 0179, 0180, 0181, 0183, 0184, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0198, 0199, 0200, 0202, 0203, 0204, 0205, 0207, 0208, 0209, 0210, 0215, 0218, 0221, 0246, 0250, 0251, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0457, 0495, 0500, 0501, 0609, 0764, 0833, 0838, 0840, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 2008, 2010, 2011, 2027, 2028, 2034, 2035, 2110, 3764, 3838, 3840.	
356	692390	Wire-Stop	524	691876	Seal-Dipstick Tube				
356C	793399	Wire-Stop	525	691320	Tube-Dipstick				
357	692191	Key-Drive Pulley Used on Type No(s). 0197.	529	692189	Grommet				
358	699933	Gasket Set-Engine	534	691417	Screw (Air Cleaner)				
362	793351	Shield-Spark Plug	535	698369	Filter-Air Cleaner Foam				
363	19069	Puller-Flywheel	536	698472	Cleaner-Air				
365	790029	Screw (Carburetor)	578	398153	Wire Assembly				
383	89838S	Wrench-Spark Plug	592	690800	Nut (Rewind Starter)				
390	691839	Spring-Choke Diaphragm	597	691696	Screw (Pawl Friction Plate)				
393	691837	Screen-Carburetor							
394	795083	Diaphragm-Carburetor							
426	691107	Screw (Governor Blade)							
455	691236	Cup-Flywheel							
456	692299	Plate-Pawl Friction							
459	281505S	Pawl-Ratchet							
523	692040	Dipstick Used on Type No(s). 0111, 0112, 0115, 0117, 0118, 0120, 0123, 0127, 0130, 0132, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0147, 0158, 0168, 0169, 0170, 0171, 0172, 0173, 0175, 0177, 0180, 0181, 0183, 0184, 0186, 0187, 0188, 0191, 0193, 0195, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0262, 0263, 0264, 0265, 0495, 0500, 0550, 0609, 0764, 0833, 0838, 0869, 0931, 0998, 1000, 1022, 1023, 1041, 1053, 1056, 1058, 1096, 1111, 1264, 1303, 1316, 1336, 1414, 2008, 2010, 2011, 2028, 2035, 2110, 3764, 3838.							
								----- Note ----- 690101 Starter-Rope (70" Rope) Used on Type No(s). 0113, 0114, 0116, 0123, 0130, 0133, 0143, 0161, 0162, 0166, 0174, 0175, 0177, 0178, 0197, 0206, 0212, 0213, 0214, 0216, 0217, 0220, 0254, 0255, 0550.	
						612	496046S	Tube-Pick Up	
						613	691413	Screw (Muffler)	

# 10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
617	270344S	Seal-O Ring (Intake Manifold)	832C	790743	Guard-Muffler Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2011, 2027, 2034, 2035, 2110.	836A	790745	Screw (Muffler Guard) (1/2" Long) Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0181, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0214, 0215, 0217, 0218, 0220, 0221, 0246, 0251, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2008, 2010, 2011, 2027, 2034, 2035, 2110.
621	692310	Switch-Stop	832D	790744	Guard-Muffler Used on Type No(s). 0181, 0214, 0246, 0251, 2008, 2010.			
633	691321	Seal-Choke/Throttle Shaft (Throttle)	836	690664	Screw (Muffler Guard) Used on Type No(s). 0100, 0120B1, 0123, 0127, 0130, 0144, 0145, 0178, 0206, 0216, 0250, 0263, 0550.			
635	66538S	Boot-Spark Plug						
668	692889	Spacer						
670	691633	Spacer-Fuel Tank						
676C	393756	Deflector-Muffler Used on Type No(s). 0215.						
677	690661	Screw (Muffler Deflector) Used on Type No(s). 0215.						
689	691855	Spring-Friction						
718	690959	Pin-Locating (Cylinder)						
718A	499047	Pin-Locating (Crankshaft)						
724	697478	Retainer-Seal						
729	690586	Clip-Wire						
741	796210	Gear-Timing (Used After Code Date 08071300).						
741	691805	Gear-Timing (Used Before Code Date 08071400).						
745	691146	Screw (Brake) (7/8" Long)						
745A	690859	Screw (Brake) (1/2" Long)						
772	691111	Screw (Linkage Cover)						
832	699299	Guard-Muffler (Super Lo Tone) Used on Type No(s). 0100, 0120B1, 0127, 0144, 0145, 0263.						
832A	699670	Guard-Muffler (Round Lo Tone) Used on Type No(s). 0123, 0130, 0178, 0206, 0216, 0250, 0550.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3718-14 Assemblies include all parts shown in frames. 01/12/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
836B	691125	Screw (Muffler Guard) (5/8" Long) Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0120B2, 0132, 0133, 0136, 0137, 0139, 0140, 0141, 0143, 0146, 0147, 0153, 0155, 0157, 0158, 0161, 0162, 0166, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0179, 0180, 0186, 0187, 0188, 0189, 0190, 0191, 0193, 0195, 0197, 0198, 0199, 0200, 0202, 0203, 0205, 0207, 0208, 0209, 0212, 0217, 0218, 0220, 0221, 0252, 0253, 0254, 0255, 0256, 0258, 0259, 0260, 0264, 0265, 0609, 0833, 0998, 1000, 1111, 2011, 2027, 2034, 2035, 2110.	913	494409	Seat-Check Valve	922	692135	Spring-Brake
			921	694044	Cover-Blower Housing Used on Type No(s). 0171, 0172, 0175, 0177, 0183, 2010, 2110.	923	691487	Brake
			921A	793973	Cover-Blower Housing Used on Type No(s). 0111, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0173, 0181, 0184, 0193, 0200, 0202, 0206, 0214, 0218, 0252, 0253, 0256, 0257, 0258, 0259, 0263, 0264, 0495, 0609, 0838, 0931, 1053, 1058, 1096, 2008, 2011, 2035, 3838.	925	691349	Cover-Linkage Used on Type No(s). 0100, 0111, 0112, 0136, 0139, 0140, 0141, 0153, 0155, 0157, 0158, 0168, 0169, 0170, 0176, 0179, 0187, 0188, 0189, 0190, 0191, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0221, 0246, 0250, 0251, 0457, 0501, 0764, 0833, 0840, 0869, 0998, 1000, 1022, 1056, 1111, 1264, 1303, 1316, 1336, 1414, 2027, 3764, 3840.
			921B	699796	Cover-Blower Housing Used on Type No(s). 0113, 0114, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 2027, 2028, 2034, 3764, 3840.	930	691348	Guard-Rewind Used on Type No(s). 0100, 0116, 0117, 0120, 0133, 0139, 0140, 0141, 0153, 0155, 0161, 0162, 0166, 0174, 0176, 0179, 0186, 0195, 0197, 0213, 0217, 0221, 0246, 0250, 0251, 0254, 0255.
842	691870	Seal-O Ring (Dipstick Tube)	921C	792273	Cover-Blower Housing Used on Type No(s). 0500, 1023, 1041.	957	497929S	Cap-Fuel Tank
847	691440	Dipstick/Tube Assembly	921D	795397	Cover-Blower Housing Used on Type No(s). 0115, 0147, 0220, 0260, 0265.	957A	791129	Cap-Fuel Tank
851	493880S	Terminal-Spark Plug	921E	796066	Cover-Blower Housing Used on Type No(s). 0147, 0210.			Used on Type No(s). 0121, 0130, 0178, 0186, 0197, 0204, 0212, 0216, 0550.
851A	692424	Terminal-Spark Plug						
868	697338	Seal-Valve						
869	699641	Seat-Valve (Intake)						
870	699642	Seat-Valve (Exhaust)						
871	699643	Bushing-Valve Guide (Exhaust)						
		----- Note ----- 63709 Bushing-Valve Guide (Intake)						

# 10T500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>957B</b>	<b>792878</b>	Cap-Fuel Tank ----- <b>Note</b> ----- <b>792878</b> Cap-Fuel Tank Used on Type No(s). 0121, 0123, 0130, 0178, 0186, 0197, 0204, 0206, 0212, 0214, 0216, 0550.	<b>969A</b>	<b>694046</b>	Screw (Blower Housing Cover) (2 1/3" Long) Used on Type No(s). 0111, 0115, 0118, 0123, 0127, 0132, 0137, 0142, 0143, 0144, 0145, 0146, 0147, 0171, 0172, 0173, 0175, 0177, 0181, 0183, 0184, 0193, 0200, 0202, 0206, 0210, 0214, 0218, 0220, 0252, 0253, 0256, 0257, 0258, 0259, 0260, 0263, 0264, 0265, 0495, 0500, 0609, 0838, 0931, 1023, 1041, 1053, 1058, 1096, 2008, 2010, 2011, 2035, 2110, 3838.	<b>969C</b>	<b>796065</b>	Screw (Blower Housing Cover) (1 1/2" Long) Used on Type No(s). 0147, 0210.
<b>969</b>	<b>692523</b>	Screw (Blower Housing Cover) Used on Type No(s). 0113, 0114, 0189, 0190, 0198, 0199, 0203, 0205, 0207, 0208, 0209, 0457, 0501, 0764, 0833, 0840, 0869, 0998, 1000, 1022, 1056, 1264, 1303, 1316, 1336, 1414, 2027, 2028, 2034, 3764, 3840.				<b>976</b>	<b>694394</b>	Primer-Carburetor
						<b>994</b>	<b>792245</b>	Arrester-Spark Used on Type No(s). 0833.
						<b>1036</b>		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
						<b>1058</b>	<b>277038</b>	Operator's Manual
						<b>1095</b>	<b>498526</b>	Gasket Set-Valve
						<b>1210</b>	<b>499901</b>	Pulley/Spring Assembly (Pulley)
						<b>1211</b>	<b>499901</b>	Pulley/Spring Assembly (Spring)
						<b>1319</b>	<b>794467</b>	Label-Warning
						<b>1330</b>	<b>270962</b>	Repair Manual

Not for  
Reproduction



Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

Not for  
Reproduction

