

# SPARE PARTS LIST

MODEL NO. HR2630T

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
008	122878-2	GRIP ASSEMBLY INC. 9-11,13-15	1	
009	346181-9	GRIP SPRING 50	1	
010	266349-0	SQUARE BOLT M8X50	1	
011	451539-0	GRIP BASE	1	
013	141765-6	LOCK BUTTON COMPLETE	1	
014	233360-7	COMPRESSION SPRING 4	1	
015	154935-8	GRIP 36 COMPLETE	1	
016	142971-6	GEAR HOUSING COMPLETE	1	
017	331890-3	CUP SLEEVE	1	
018	211294-4	BALL BEARING 6806LLU	1	
019	232286-0	LEAF SPRING	1	
020	346833-2	CHANGE PLATE B	1	
021	346832-4	CHANGE PLATE A	1	
022	213278-8	O RING 17	1	
023	455392-6	CHANGE LEVER	1	
024	455394-2	CHANGE LEVER CAP	1	
025	455391-8	CHANGE LEVER COVER	1	
027	216019-1	STEEL BALL 3	4	
028	140266-1	TOOL HOLDERGUIDE COMPLETE	1	
029	332139-4	DRIVING FLANGE	1	
030	227360-7	SPUR GEAR 51	1	
033	234148-8	COMPRESSION SPRING 31	1	
034	267153-0	FLAT WASHER 30	1	
035	257932-4	SPIRO LOCK WASHER 30	1	
036	267153-0	FLAT WASHER 30	1	
037	325783-4	SLEEVE 9B	1	
038	325791-5	IMPACT BOLT B	1	
039	325795-7	RING 10B	1	
040	424267-0	CUSHION RING 12	1	
041	325798-1	O-RING CASE A	1	
042	213073-6	O RING 9	1	
043	233979-2	RING SPRING 28	1	
044	325784-2	STRIKER	1	
045	213258-4	O RING 17.5	1	
046	310345-1	PISTON CYLINDER	1	
047	346036-8	GUIDE PLATE	1	
048	324215-8	PISTON JOINT	1	
049	234098-7	COMPRESSION SPRING 14	1	
050	210028-2	BALL BEARING 606ZZ	1	
051	257336-0	STOP RING EXT U-6	1	
052	253186-1	FLAT WASHER 7	1	
053	233360-7	COMPRESSION SPRING 4	1	
054	346831-6	LOCK PLATE	1	
055	326448-1	CAM SHAFT	1	
056	227359-2	SPUR GEAR 10	1	
057	332125-5	CLUTCH CAM	2	
058	219014-0	SWASH BEARING 10	1	
059	257321-3	RING 8	1	
060	310344-3	BEARING BOX	1	
061	211032-4	BALL BEARING 608ZZ	1	
062	266437-3	HEX. SOCKET HEAD BOLT M4X16	2	
063	285735-6	BEARING RETAINER	1	
064	227719-8	HELICAL GEAR 26	1	
065	213728-3	O-RING 68	1	
069	141572-7	INNER HOUSING COMPLETE	1	
070	213407-3	O RING 26	1	
071	213678-2	OIL SEAL 12	1	
072	262569-4	SLEEVE 9	1	
073	211097-6	BALL BEARING 6000LLB	1	
074	961006-2	RETAINING RING S-10	1	

# SPARE PARTS LIST

MODEL NO. HR2630T

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
075	240121-8	FAN 65	1	
076	515359-7	ARMATURE ASSEMBLY 240V INC. 72-75,77,78	1	
077	681652-2	INSULATION WASHER	1	
078	210023-2	BALL BEARING 627DDW	1	
079	267804-5	WAVE WASHER 15	1	
083	266361-0	TAPPING SCREW 4X30	2	
084	451527-7	BAFFLE PLATE	1	
085	626634-7	FIELD 240V	1	
086	451536-6	MOTOR HOUSING	1	
087	850M38-1	HR2630T NAME PLATE	1	
088	819390-8	CLEAR LABEL	1	
089	194074-2	CARBON BRUSH CB-325	1	
090	638655-7	BRUSH HOLDER UNIT	1	
091	266556-5	TAPPING SCREW 3X12	2	
092	266361-0	TAPPING SCREW 4X30	4	
093	850M42-0	HR2630T SERIAL NO. LABEL	1	
094	819389-3	CLEAR LABEL	1	
095	682566-8	CORD GUARD 10	1	
096	665890-4	POWER SUPPLY CORD 1.0-2-4.0	1	
097	650625-6	SWITCH	1	
099	687682-1	STRAIN RELIEF	1	
100	266385-6	TAPPING SCREW 4X14	1	
101	266326-2	TAPPING SCREW 4X18	1	
102	451528-5	HANDLE COVER	1	
103	266326-2	TAPPING SCREW 4X18	2	
104	194080-7	TOOL HOLDER SET INC. 105-121	1	
105	286263-4	CAP 35	1	
106	233940-9	RING SPRING 19	1	
107	418217-5	CHUCK COVER	1	
108	345333-9	STOPPER	1	
109	216022-2	STEEL BALL 7.0	1	
110	345187-4	GUIDE WASHER	1	
111	233916-6	CONICAL COMP. SPRING 21-29	1	
112	267279-8	FLAT WASHER 21	1	
113	324355-2	TOOL HOLDER	1	
114	216013-3	STEEL BALL 6	2	
115	231669-1	TORSION SPRING 31	1	
116	345334-7	CHANGE RING	1	
117	418218-3	CHANGE COVER	1	
118	216018-3	STEEL BALL 5.0	1	
119	345335-5	LEAF SPRING	1	
120	267270-6	FLAT WASHER 24	1	
121	233924-7	RING SPRING 21	1	
122	267447-3	FLAT WASHER 14	1	
123	234343-0	COMPRESSION SPRING 5	1	
124	263005-3	RUBBER PIN 6	1	
A01	194079-2	DRILL CHUCK SET	1	
A02	331886-4	DEPTH GAUGE	1	
A03	824916-3	PLASTIC CARRYING CASE	1	

# SERVICE DRAWING

MODEL NO. HR2630T

